



Uniclass L725111	EPIC G611
CI/SfB (74.26)	X

Instruction for Challis Universal Aerator Insert Kit

Remove the original housing from the spout end, being careful not to lose the gasket. Thread is usually anti clockwise twist to remove see Tip below.

Remove the original insert from the housing


3. From the three components select which one fits suitably
 - a. The grey ring is for housings that have an internal shoulder at the outlet of the housing.
 - b. The black ring is for housings that have no visible shoulder.

For small housings (JR size) just insert the aerator

If using the Grey or Black converter ring. When selected insert the aerator fully into the ring until the top of the aerator is flush with the top of the ring.

Install ring assembly complete with aerator into the housing and using original gasket replace on to spout hand tight

Tip for removing housing on spouts without damage. Use Neoperl Tool (art No 09911000002) or alternatively if tool is not available wrap a loop of parcel string around the outside of the housing and tighten like a tourniquet. Then use the string as leverage to unscrew the housing (anti clock wise direction)

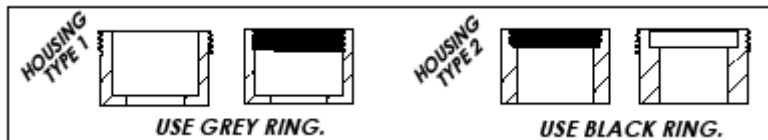

**Sole Distributor for FM Mattsson
Promoting Swedish Design & Technical Excellence**

A.L.Challis Limited, Registered Office: Thornfield, Wyndale Close, Henley-on-Thames, Oxfordshire. RG9 1BA
Registered in England & Wales: No. 4518956 VAT No. 797 4131 95
Tele: 01628 529024 Web: www.alchallis.com e-mail: info@alchallis.com